



Speed For Sale LLC

Website: www.SpeedForSale.com/nissangtrparts

Email: Sales@SpeedForSale.com

Telephone: 770-777-4774

Location area: Atlanta, Georgia, USA

SpeedForSale.com's Installation Guide Series: **Carbon Fiber Fender Vents for 2009 GT-R**

THESE '**CARBON FIBER FENDER VENTS**' CAN BE PURCHASED HERE:
http://www.speedforsale.com/nissangtrparts/aero-visual-mods-body-kits-panels-c-29_53.html

YOU CAN ALSO VIEW OUR '**STAGED POWER UPGRADES**' HERE:
<https://www.speedforsale.com/nissangtrparts/speed-sale-speedforsale-staged-power-upgrades-p-1030.html?osCsid=2airirkvjdggclcjmqfiildbt3>

Article written by Jared Pink with the help of Chinchhi Chiang. Article revised and converted to PDF by Jeremy Blackwell.

Time:

.5-2 hours depending on experience and tools

Difficulty:

Easy

Description:

This is an installation article that shows you how to install Mine's Carbon Fiber Fender Vents (and any other brand.)

Tools Needed:


- Heat Gun
- Thin plastic pry tool
- Microfiber cloth
- Isopropyl alcohol or other adhesive and residue remover (included with most fender vent kits)

Installation:

1. Using a heat gun on low setting, heat the factory vent. This will soften the two sided tape and make removal easier.
2. Insert your thin pry tool at the base of the panel, twisting slightly. As a gap forms, use your finger to hold it away from the body. Move the pry tool up slightly and repeat this process, slowly “walking” up the panel, moving your finger up and pulling outwards slightly.





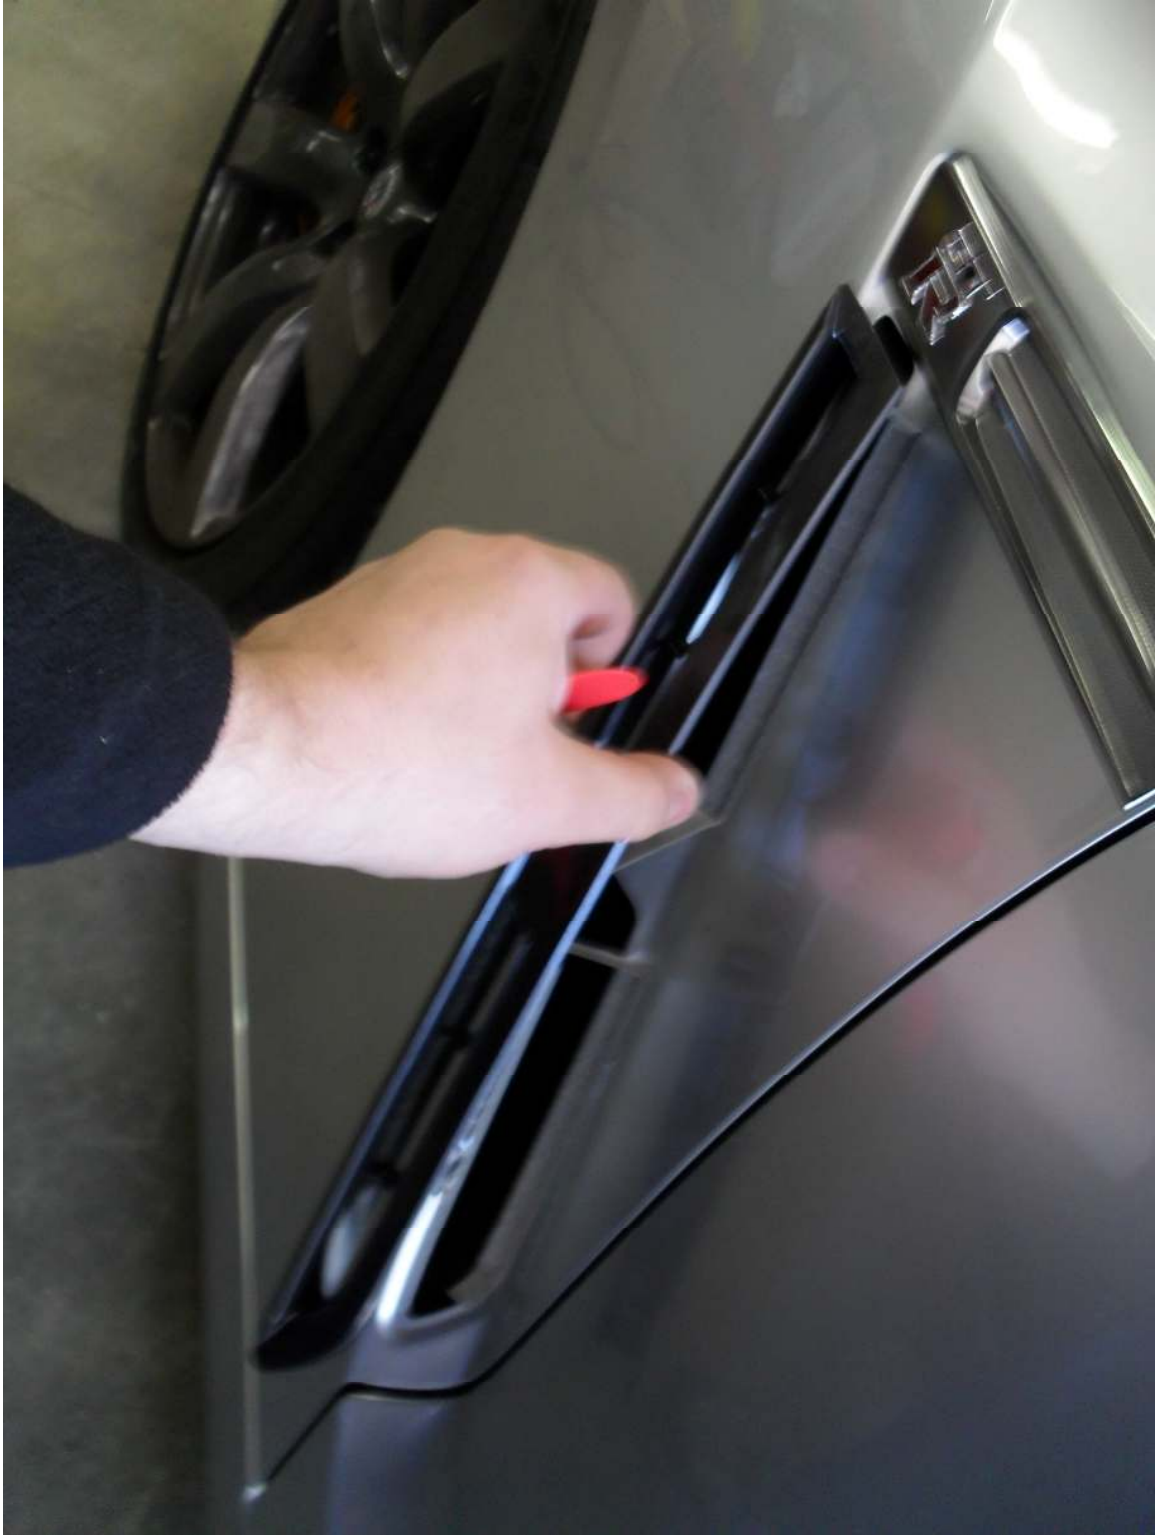

3. Once the panel is removed, use the heat gun on low setting to warm left over two sided tape. You will want to roll it upwards with your fingers. Once you have the foam residue off, use your microfiber cloth with the included cleaner primer to remove leftover glue residue from the panel.



4. Use the included two sided tape and place it on the carbon fiber vent. You will want to have roughly 1/8" clearance from the outside, as some brands do not fit tightly, and will have a mild gap. If the tape is run on the very edge, it becomes visible once installed.

5. Very gently move into position, avoiding any pressure until the vent is properly aligned. Pressing upwards slightly from the bottom will give you a better fit against the "GTR" badge. Starting from the top, press firmly against the vent to seat the two sided tape.



6. Repeat on the other side